

Disclaimer

This company will endeavor to make sure the contents of this manual are correct and up to date. However, we do not guarantee the accuracy of the contents of this manual. In case there is any discrepancy between this manual and the Digital Video Camera, please use this camera as the basis. We reserve the right to change any content or technical rule without prior notification. In addition, the manufacturer reserves the right to change technical specifications and package contents without prior notification.

Disposal of Waste Electrical and Electronic Equipment by users in private households in the European Union.

This symbol on the product or on the packaging indicates that this can not be disposed of as household waste. You must dispose of your waste equipment by handing it over to the applicable take-back scheme for the recycling of electrical and electronic equipment. For more information about recycling of this equipment, please contact your city office, the shop where you purchased the equipment or your household waste disposal service. The recycling of materials will help to conserve natural resources and ensure that it is recycled in a manner that protects human health and environment.



FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following

measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

For more details about the camcorder operation and trouble shooting, please read the User Manual located on the CDROM disc included with your camcorder.

1 Overall Introduction

1.1 System Requirements

This Digital Video Camera requires a unit of computer with the following specifications:

- Windows® Vista / XP / 2000 operating system or Mac OS 10.3 ~10.4
- A CPU of at least the equivalent of Intel® Pentium 4 2.8GHz
- At least 2GB of RAM
- Standard USB 1.1 connection port or higher
- At least 64MB of display card

Note: USB 1.1 allows you to transmit files to the host, but using USB 2.0 connection port could increase the transmission speed far faster.

 
1.2 Accessories

This package should contain the following items. In case there is any missing or damaged item, please contact your dealer immediately.

① Digital video camera



② Pouch



③ Quick guide



④ Software CD



⑤ HDMI cable



⑥ Video cable



⑦ USB cable




⑧ Adaptor



⑨ Lithium battery



1.3 External View

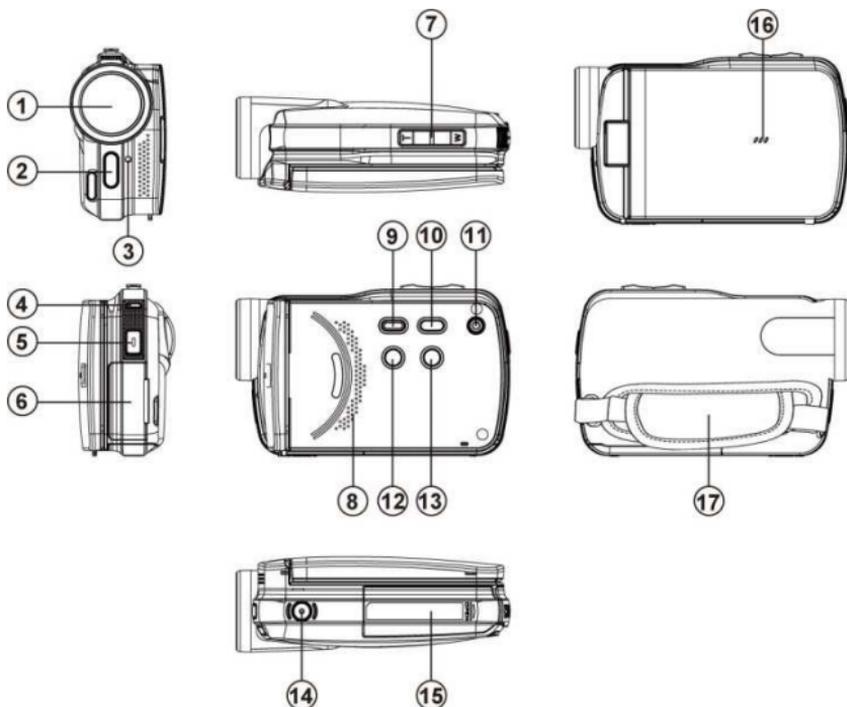


1	Lens	10	Menu Button
2	LED Light	11	Power
3	Self-timer Indicator	12	Light Button
4	Status Display	13	Mode Button
5	Recording Button	14	Tripod socket
6	USB/HD/TV Output	15	Battery / Memory Card Compartment
7	Zoom Button	16	Microphone
8	Speaker	17	Hand Strap
9	Playback Button		

2 Getting Started

2.1 Inserting SD Card(s)

Insert an SD card with the label facing downwards..

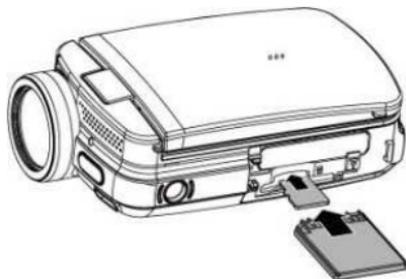

Note:

Do not remove or insert SD cards when the power of the Digital Video Camera is on to avoid damaging files.

2.2 Loading the Battery

Please use only the battery provided or recommended by the manufacturer or dealer. Insert the battery according to the illustration.




Note:

Insert the battery correctly according to this description. Error in inserting the battery could result in damage to this Digital Video Camera and result in fire.

2.3 Battery Status Indicator:

	Battery full
	Battery half full
	Battery empty
	<ul style="list-style-type: none">• Charging battery (A new battery should be charged at least 4 hours.)• The device power is supplied by DC input. (No battery inside.)

2.4 Charging the Battery

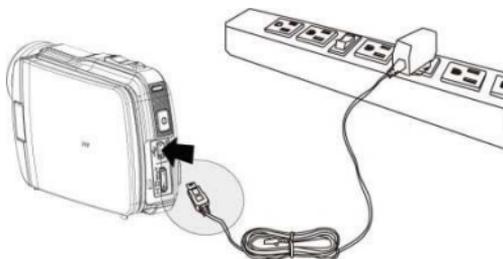

You can use the adaptor attached to charge the lithium battery.

Insert the lithium battery into the Digital Video Camera and connect the camera to the cable of the adaptor.

2.5 Buttons & Functions

Description	Button	Function
Power Button		Press the button to turn ON/OFF the power.
Menu Button		Press the button to display the main OSD menu.

<p>LIGHT Button & MODE Button</p>		<ul style="list-style-type: none"> - Press [MODE] to access different models of DV, DSC and Voice recording. - Press [LIGHT] to turn ON/OFF the LED Torch - [MENU] and [PLAY BACK], 2 buttons can be used for selection of the relevant functions. [LIGHT] is for left and [MODE] is for right.
<p>Zoom Button</p>		<ul style="list-style-type: none"> - This Digital Video Camera is equipped with 5X optical zoom and 4X digital zoom function. Please note that the 4X digital zoom is supported in 720P or lower video resolutions. - The [T] and [W] buttons can be used for function selection in the mode of [MENU]
<p>Recording button</p>		<p>Press the start/stop button  to take the image, or to start/stop movie clip and voice recording.</p>
<p>Playback Button</p>		<p>Press the Playback button to enter Playback mode and playback the last file.</p>

2.6 About LED Indicators


Below table describes the meaning of the camera LED indicators:

	Indicator Color	Definition
Power	Green	Turning power on.
Recording	Red blinking	Recording
Self-timer	Red blinking	Start of Self-timer.


2.7 Initial settings before use

Setting Date and Time

1. Turn on the Digital Video Camera to set up the date and time for the first time. Set the date and time by moving up/down button or touching the screen to select.

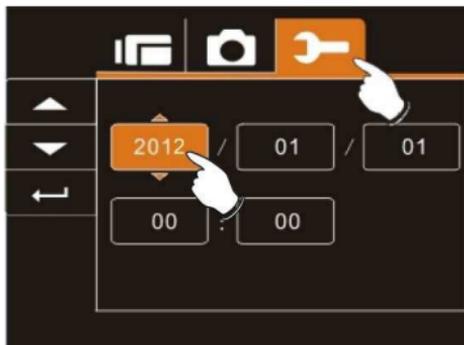

2. Press left/right to highlight each column. Press Up/Down or touch the screen to select the column to adjust the value. Press Menu Button to store the value you change or touch the screen to adjust the Year, Date and Time before pressing the Return Button () to store the value and leave the setting.

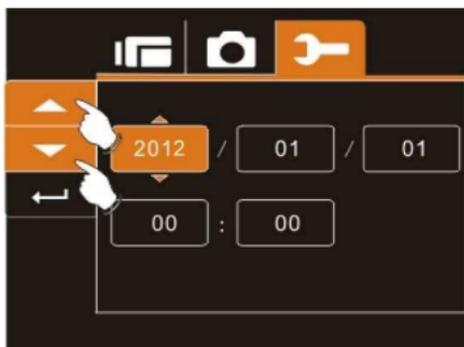

Technical Support

For technical support issues please visit our website at www.polaroid.com. For further assistance, you can also call our technical support department toll free at 877-408-0033, or for e-mail support, please contact us at polaroid@sakar.com .

© 2012 All Rights Reserved

Warranty Card

This warranty covers the original consumer purchaser only and is not transferable.

This warranty covers products that fail to function properly **UNDER NORMAL USAGE**, due to defects in material or workmanship. Your product will be repaired or replaced at no charge for parts or labor for a period of one year.

What Is Not Covered by Warranty

Damages or malfunctions not resulting from defects in material or workmanship and damages or malfunctions from other than normal use, including but limited to, repair by unauthorized parties, tampering, modification or accident.

To obtain Warranty Service and Troubleshooting information:

Call 877-408-0033 or Visit our website at
www.polaroid.com

To receive Warranty service along with the name and address of an authorized product service center, the original consumer purchaser must contact us for problem determination and service procedures. Proof of purchase in the form of a bill of sale or receipted invoice, evidencing that the Product is within the applicable Warranty period(s), **MUST** be presented in order to obtain the requested service. It is your responsibility to properly package and send any defective products along with a dated copy of proof of purchase, a written explanation of the problem, and a valid return address to the authorized service center at your expense. Do not include any other items or accessories with the defective product. Any products received by the authorized service center that are not covered by warranty will be returned unrepaid.

NO WARRANTIES, WHETHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, OTHER THAN THOSE EXPRESSLY DESCRIBED ABOVE SHALL APPLY. DISTRIBUTOR FURTHER DISCLAIMS ALL WARRANTIES AFTER THE EXPRESS WARRANTY PERIOD STATED ABOVE. NO OTHER EXPRESS WARRANTY OR GUARANTY GIVEN BY ANY PERSON, FIRM OR ENTITY WITH RESPECT TO THE PRODUCT SHALL BE BINDING ON DISTRIBUTOR. REPAIR, REPLACEMENT, OR REFUND OF THE ORIGINAL PURCHASE PRICE - AT DISTRIBUTOR'S SOLE DISCRETION - ARE THE EXCLUSIVE REMEDIES OF THE CONSUMER. IN NO EVENT WILL DISTRIBUTOR, ITS MANUFACTURERS, OR PLR IP HOLDINGS, LLC BE LIABLE FOR ANY INCIDENTAL, DIRECT, INDIRECT, SPECIAL, PUNITIVE OR CONSEQUENTIAL DAMAGES (SUCH AS, BUT NOT LIMITED TO, DAMAGES FOR LOSS OF PROFITS, BUSINESS, SAVINGS, DATA OR RECORDS) CAUSED BY THE USE, MISUSE OR INABILITY TO USE THE PRODUCT. EXCEPT AS STATED HEREIN, NO OTHER WARRANTIES SHALL APPLY. NOTWITHSTANDING THE FOREGOING, CONSUMER'S RECOVERY AGAINST DISTRIBUTOR SHALL NOT EXCEED THE PURCHASE PRICE OF THE PRODUCT SOLD BY DISTRIBUTOR. THIS WARRANTY SHALL NOT EXTEND TO ANYONE OTHER THAN THE ORIGINAL CONSUMER WHO PURCHASED THE PRODUCT AND IS NOT TRANSFERABLE.

Some countries, states or provinces do not allow the exclusion or limitation of incidental or consequential damages or allow limitations on warranties, so limitation or exclusions may not apply to you. This warranty gives you specific legal rights, and you may have other rights that vary from state to state or province to province. Contact your authorized retailer to determine if another warranty applies.

This product is manufactured, distributed and sold by SAKAR International, Inc. Polaroid, Polaroid & Pixel, Made in Polaroid and Polaroid Classic Border Logo are trademarks of PLR IP Holdings, LLC, used under license. All other trademarks are the property of the respective owner, who has not sponsored, endorsed or approved this product. PLR IP Holdings, LLC does not manufacture this product or provide any Manufacturer's Warranty or support.

E-Waste - PLR IP Holdings, LLC, its licensees, affiliates, and Sakar International, Inc. fully supports all electronic waste initiatives. As responsible stewards of the environment, and to avoid violating established laws, you should properly dispose of this product in compliance with all applicable regulations, directives or other governances in the area where you reside. Please check with local authorities or the retailer where you purchased this product to determine a location where you can appropriately dispose of the product.

You may also go to www.polaroid.com and reference Social Responsibility to learn more about the specific laws in your area and to locate a collection facility near your home.

If your electronic device has internal memory on which personal or other confidential data may be stored, you may want to perform a data sanitization process before you dispose of your device to assure another party cannot access your personal data. Data sanitization varies by the type of product and its software, and you may want to research the best sanitization process for your device before disposal. You may also check with your local recycling facility to determine their data sanitization procedures during the recycling process.