

For technical support issues please visit our website at [www.polaroid.com](http://www.polaroid.com). For further assistance, you can also call our technical support department toll free at 877-408-0033, or for e-mail support, please contact us at [polaroid@sakar.com](mailto:polaroid@sakar.com).

**Warranty Card**

This warranty covers the original consumer purchaser only and is not transferable. This warranty covers products that fail to function properly UNDER NORMAL USAGE, due to defects in material or workmanship. Your product will be repaired or replaced at no charge for parts or labor for a period of one year.




**What is Not Covered by Warranty**


Damages or malfunctions not resulting from defects in material or workmanship and damages or malfunctions from other than normal use, including but not limited to, repair by unauthorized parties, tampering, modification or accident.

**To obtain Warranty Service and Troubleshooting information:**

Call 877-408-0033 or Visit our website at [www.polaroid.com](http://www.polaroid.com).

To receive Warranty service along with the name and address of an authorized product service center, the original consumer purchaser must contact us for problem determination and service procedures. Proof of purchase in the form of a bill of sale or receipted invoice, evidencing that the product is within the applicable Warranty period(s), MUST be presented in order to obtain the requested service. It is your responsibility to properly package and send any defective products along with a dated copy of proof of purchase, a written explanation of the problem, and a valid return address to the authorized service center at your expense. Do not include any other items or accessories with the defective product. Any products received by the authorized service center that are not covered by warranty will be returned unrepaired.

 Questions? Need some help? This manual will help you enjoy your new product.
  If you still have questions, call our help line: 877-408-0033
  or visit us at: [www.polaroid.com](http://www.polaroid.com)

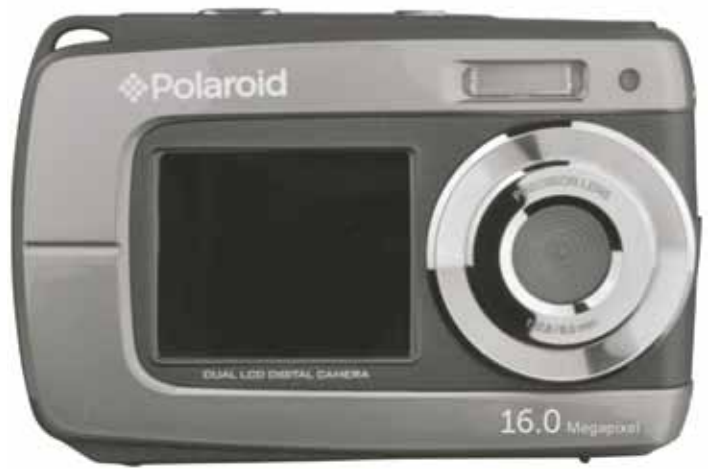

**iS085**  
Quick Start Guide  
**READ ME FIRST**

**System Requirements**

Operating system	WinXP (SP3) Vista (SP1) Win7 and Mac OS X v10.5.x or above
CPU	Pentium III or above
RAM	1GB
Interface	USB port
CD	4x speed CD ROM or above

If you would like more detailed instructions beyond the Quick Start Guide, the full camera manual is available on the Home screen or in the "Help" menu after installing the Polaroid Instant Memories Media Manager

Windows and the Windows logo are registered trademarks of Microsoft Corporation. All other trademarks are the property of their respective companies.








**E-Waste** - PLR IP Holdings, LLC, its licensees, affiliates, and Sakar International, Inc. fully supports all electronic waste initiatives. As responsible stewards of the environment, and to avoid violating established laws, you should properly dispose of this product in compliance with all applicable regulations, directives or other governances in the area where you reside. Please check with local authorities or the retailer where you purchased this product to determine a location where you can appropriately dispose of the product.

You may also go to [www.polaroid.com](http://www.polaroid.com) and reference Social Responsibility to learn more about the specific laws in your area and to locate a collection facility near your home.






If your electronic device has internal memory on which personal or other confidential data may be stored, you may want to perform a data sanitization process before you dispose of your device to assure another party cannot access your personal data. Data sanitization varies by the type of product and its software, and you may want to research the best sanitization process for your device before disposal. You may also check with your local recycling facility to determine their data sanitization procedures during the recycling process.

This device complies with the part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Caution: changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with instructions may cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on. The user is encouraged to try to correct the interference by one or more of the following measures: Reorient or relocate the receiving antenna. Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or experienced radio/TV technician for help.

**Download Images**

-  Turn on your camera
-  Connect camera via USB to computer
-  Open software and press the "Get Images" button
-  Follow instructions on the screen to download images
-  Edit and Upload images to social networks

**Install Software**

-  Locate software CD found in package
-  Connect your PC or MAC to the internet
-  Insert CD
-  Follow all instructions to install software
-  Software will open

# 1 WHAT'S INCLUDED



- 1. Digital Camera
- 2. USB cable
- 3. Installation CD
- 4. Wrist Strap

Micro SD Memory Card not included

# 2 PARTS OF THE CAMERA



- |                        |                         |
|------------------------|-------------------------|
| 1. Shutter             | 11. Up/Tele             |
| 2. Power on/off button | 12. Down/Wide           |
| 3. LCD switch button   | 13. Left / Flash light  |
| 4. Strap hook          | 14. Right / Playback    |
| 5. Small monitor       | 15. Mode Switch         |
| 6. Flash light         | 16. Menu / Delete       |
| 7. Lens                | 17. Battery compartment |
| 8. Busy indicator      | 18. Micro SD card slot  |
| 9. Macro/normal switch | 19. USB interface       |
| 10. LCD screen         | 20. Tripod connector    |

# 3 INITIAL SETUP

Installing the batteries    Installing memory card



Insert 2 x AAA (1.5V) batteries. Alkaline batteries recommended (not included).



Micro SD Memory card (up to 32GB) needed for normal use

Turning On the camera    Using the camera



# 4 MAIN CAMERA MODES

Your camera has different modes for the various camera functions.

You can switch modes by pressing the **MODE** button on your camera after the camera has been powered ON.

## Photo Capture Mode

Use this mode to capture pictures with your camera.

This is the default mode when the camera is powered ON. To take a picture, aim your camera as desired and press the "Shutter" button. The picture will be automatically saved to your camera's memory card.

To access the various menus for the Photo Capture mode, press the **MENU** button while in the Photo Capture mode. For more information, please refer to your camera's User Manual.

## Video Capture Mode

Use this mode to capture videos with your digital camera.

After turning on your camera, press the **MODE** button once to open the Video Capture mode. To take a video, aim your camera as desired and press the "Shutter" button to start the record. A red record indicator will appear on the LCD screen while record is in progress. To stop the record, press the "Shutter" button again. The video will be automatically saved to your camera's memory card.

To access the various menus for the Video Capture mode, press the **MENU** button while in the Video Capture mode. For more information, please refer to your camera's User Manual.

## Playback Mode (Photos & Videos)

Use this mode to view and manage the photos and videos on your camera.

After turning on your camera, press the **PLAYBACK** button to open the Playback mode for photos and videos. You can scroll through the photos and videos that you've previously taken to view or delete them as desired.

To access the various menus for the Playback mode for photos and videos, press the **MENU** button while in the Playback mode. For more information, please refer to your camera's User Manual.