

For technical support issues please visit our website at www.polaroid.com. For further assistance, you can also call our technical support department toll free at 877-408-0033, or for e-mail support, please contact us at polaroid@sakkar.com.

Warranty Card

This warranty covers the original consumer purchaser only and is not transferable. This warranty covers products that fail to function properly UNDER NORMAL USAGE, due to defects in material or workmanship. Your product will be repaired or replaced at no charge for parts or labor for a period of one year.

What is Not Covered by Warranty

Damages or malfunctions not resulting from defects in material or workmanship and damages or tampering, modification or accident.

To obtain Warranty Service and Troubleshooting information:

Call 877-408-0033 or visit our website at www.polaroid.com.

To receive Warranty Service along with the name and address of an authorized product service center, the original consumer purchaser must contact us for problem determination and service procedures. Proof of purchase in the form of a bill of sale or receipted invoice, evidencing that the Product is within the applicable Warranty period (MUST be presented in order to obtain the requested service. It is your responsibility to properly package and send any defective products along with a dated copy of proof of purchase, a written explanation of the problem, and a valid return address to the authorized service center. Do not include any other accessories or assessories with the defective product. Any products received by the authorized service center that are not covered by warranty will be returned unrepaired.

Questions? Need some help? This manual will help you enjoy your new product.
 If you still have questions, call our help line: 877-408-0033
 or visit us at: www.polaroid.com



iS529
Quick Start Guide
READ ME FIRST

System Requirements

Operating system	WinXP (SP3) Vista (SP1) Win7 and Mac OS X v10.5.x or above
CPU	Pentium III or above
RAM	1GB
Interface	USB port
CD	4x speed CD ROM or above

If you would like more detailed instructions beyond the Quick Start Guide, the full camera manual is available on the Home screen or in the "Help" menu after installing the Polaroid Instant Memories

Windows and the Windows logo are registered trademarks of Microsoft Corporation. All other trademarks are the property of their respective companies.



Install Software

- Locate software CD found in package
- Connect your PC or MAC to the internet
- Insert CD
- Follow all instructions to install software
- Software will open

Download Images

- Turn on your camera
- Connect camera via USB to computer
- Open software and press the "Get Images" button
- Follow instructions on the screen to download images
- Edit and Upload images to social networks

E-Waste - PLR IP Holdings, LLC, its licensees, affiliates, and Sakkar International, Inc. fully supports electronic waste initiatives. As responsible stewards of the environment, and to avoid violating established laws, you should properly dispose of this product in compliance with all applicable regulations, directives or other governmental in the area where you reside. Please check with local authorities or the retailer where you purchased this product to determine a location where you can appropriately dispose of the product.

You may also go to www.polaroid.com and reference Social Responsibility to learn more about the specific laws in your area and to locate a collection facility near your home.

If your electronic device has internal memory on which personal or other confidential data may be stored, you may want to perform a data sanitization process before you dispose of your device to assure another party cannot access your personal data. Data sanitization varies by the type of product and its software, and you may want to research the best sanitization process for your data sanitization procedures during the recycling process.

This device complies with the part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Caution: changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and radiates radio frequency energy and, if not installed and used in accordance with instructions may cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on. The user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or experienced radio/TV technician for help.

Some countries, states or provinces do not allow the exclusion or limitation of incidental or consequential damages or allow limitations on warranties, so limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may have other rights that vary from warranty applies.

This product is manufactured, distributed and sold by Sakkar International, Inc. Polaroid, Polaroid & Pixel, Made in Polaroid and Polaroid Classic Border Logo are trademarks of PLR IP Holdings, LLC, used under license. All other trademarks are the property of the respective owner, who has not sponsored, endorsed or approved this product. PLR IP Holdings, LLC does not manufacture this product or provide any Manufacturer's Warranty or support.

© 2012 All Rights Reserved

AND IS NOT TRANSFERABLE.

EXTEND TO ANYONE OTHER THAN THE ORIGINAL CONSUMER WHO PURCHASED THE PRODUCT PURCHASE PRICE OF THE PRODUCT SOLD BY DISTRIBUTOR. THIS WARRANTY SHALL NOT APPLY TO ANY OTHER WARRANTIES SHALL APPLY, NOTWITHSTANDING THE FOREGOING, CONSUMER'S RECOVERY AGAINST DISTRIBUTOR SHALL NOT EXCEED THE PRODUCT. EXCEPT AS STATED HEREIN, NO OTHER WARRANTIES SHALL APPLY, NOTWITHSTANDING ORIGINAL PURCHASE PRICE - AT DISTRIBUTOR'S SOLE DISCRETION - ARE THE EXCLUSIVE REMEDIES OF THE CONSUMER. IN NO EVENT WILL DISTRIBUTOR, ITS MANUFACTURERS, OR PLR IP HOLDINGS, LLC BE LIABLE FOR ANY INCIDENTAL, DIRECT, INDIRECT, SPECIAL, PUNITIVE OR CONSEQUENTIAL DAMAGES (SUCH AS, BUT NOT LIMITED TO, DAMAGES FOR LOSS OF PROFITS, BUSINESS, SAVINGS, DATA OR RECORDS) CAUSED BY THE USE, MISUSE OR INABILITY TO USE THE PRODUCT. ORIGINAL PURCHASE PRICE - AT DISTRIBUTOR'S SOLE DISCRETION - ARE THE EXCLUSIVE REMEDIES OF THE CONSUMER. IN NO EVENT WILL DISTRIBUTOR, ITS MANUFACTURERS, OR PLR IP HOLDINGS, LLC BE LIABLE FOR ANY INCIDENTAL, DIRECT, INDIRECT, SPECIAL, PUNITIVE OR CONSEQUENTIAL DAMAGES (SUCH AS, BUT NOT LIMITED TO, DAMAGES FOR LOSS OF PROFITS, BUSINESS, SAVINGS, DATA OR RECORDS) CAUSED BY THE USE, MISUSE OR INABILITY TO USE THE PRODUCT.

PRODUCT SHALL BE BINDING ON DISTRIBUTOR, REPAIR, REPLACEMENT, OR REFUND OF THE WARRANTY OR GUARANTY GIVEN BY ANY PERSON, FIRM OR ENTITY WITH RESPECT TO THE WARRANTY OR GUARANTY PERIOD STATED ABOVE. NO OTHER EXPRESS THAN THOSE EXPRESSLY DESCRIBED ABOVE SHALL APPLY, DISTRIBUTOR FURTHER DISCLAIMS IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, OTHER NO WARRANTIES, WHETHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, ANY

1 WHAT'S INCLUDED



- 1. Digital Camera
- 2. Lithium Battery
- 3. USB cable
- 4. Installation CD
- 5. Wrist Strap
- 6. AC Charger

Micro SD Memory Card not included

2 PARTS OF THE CAMERA



- 1. Power button
- 2. Shutter button
- 3. LCD Screen
- 4. LED (Charge/Flash Indicator)
- 5. Zoom Out
- 6. Zoom In
- 7. Up/Flash/Slide Show button
- 8. Right/Delete button
- 9. Down/ViviLink button
- 10. SET (Menu/OK) button
- 11. Left/Scene button
- 12. MODE button
- 13. Microphone
- 14. Flash
- 15. USB Slot
- 16. Tripod Mount
- 17. Optical Lens
- 18. Battery/SD memory card slot
- 19. Wrist Strap connector
- 20. Speaker
- 21. Self Timer LED

3 INITIAL SETUP

Installing the battery



- To Charge the Battery:
- Insert the battery (as shown above).
 - Power OFF the camera.
 - Connect the camera using the USB cable to the computer's USB port or to the AC Adapter (which is then connected to a standard wall socket).
 - Charge light will turn off when battery is fully charged.

Installing memory card



- SD Memory card (up to 32GB) needed for normal use

Turning On the camera



Accessing the menu



- Selecting the modes
- Accessing the menu

4 MAIN CAMERA MODES

Your camera has different modes for the various camera functions. You can switch modes by pressing the MODE button on your camera after the camera has been powered ON.

Photo Capture Mode

Use this mode to capture pictures with your camera.

This is the default mode when the camera is powered ON. To take a picture, aim your camera as desired and press the "Shutter" button. The picture will be automatically saved to your camera's memory card.

To access the various menus for the Photo Capture mode, press the SET button while in the Photo Capture mode. For more information, please refer to your camera's user manual.

Video Capture Mode

Use this mode to capture videos with your digital camera.

After turning on your camera, press the MODE button once to open the Video Capture mode. To take a video, aim your camera as desired and press the "Shutter" button to start the recording. A red indicator will appear on the LCD screen while the recording is in progress. To stop recording, press the "Shutter" button again. The video will be automatically saved to your camera's memory card.

To access the various menus for the Video Capture mode, press the SET button while in the Video Capture mode. For more information, please refer to your camera's user manual.

Playback Mode (Photos & Videos)

Use this mode to view and manage the photos and videos on your camera.

After turning on your camera, press the MODE button twice to open the Playback mode for photos and videos. You can scroll through the photos and videos that you've previously taken to view, edit or delete them as desired.

To access the various menus for the Playback mode for photos and videos, press the SET button while in the Playback mode. For more information, please refer to your camera's user manual.